

## Florestone Fiberglass Shower Features

### QUALITY YOU CAN TRUST.

Since 1947, Florestone Products Company has built a reputation based on product quality, ease of installation and reliability. Today we serve contractors, engineers, specifiers, architects and builders with products, service and distribution nationwide. The manufacturing methods, craftsmanship and attention to detail of Florestone Fiberglass Showers are second to none.

### WIDE VARIETY OF SIZES AND STYLES.

We offer a wide choice of models, sizes, and styles. The "tile back" look gives you another decorative option.

### COLORS

Standard: White

### OPTIONAL MANUFACTURERS' MATCH COLORS

#### AMERICAN STANDARD

Bone	Light Mink	Spring
Candlelight	Loganberry	Sterling Silver
Daydream	Rain Forest	Shell
Fawn Beige	Rhapsody Blue	Warm White

#### ELJER

Classic Grey	Peach Bisque	Twilight Blue
Dusty Rose	Platinum	Verde
Glacier Blue	Ruby	Zinfandel
Island Sea	Sage	
Natural	Sandlewood	

#### KOHLER

Almond	Innocent Blush	Teal Tender Grey
Biscuit	Jersey Cream	Thunder Grey
Chamois	Mexican Sand	Timberline
Country Grey	Merlot	Wild Rose
Desert Bloom	Seafoam Green	
Ice Grey	Skylight	

*For other colors, call for availability and price.*



### FLORESTONE PRODUCTS CO., INC.

2851 Falcon Drive • Madera, CA 93637  
T. 559.661.4171 • T. 800.446.8827  
F. 559.661.2070 • florestone.com

#### **\*Note on Code Compliance:**


*Since local codes and regulations vary Florestone Products will not be responsible for code compliance. Please check with your local city and county building departments for specific regulations or restrictions before ordering.*

## Florestone Fiberglass Showers Installation Instructions

**FLORESTONE SHOWERS  
SHOULD BE  
INSTALLED BY A  
PROFESSIONAL PLUMBING  
CONTRACTOR.**

### FRAMING


Complete two sides of the squared and framed pocket according to dimensional drawings

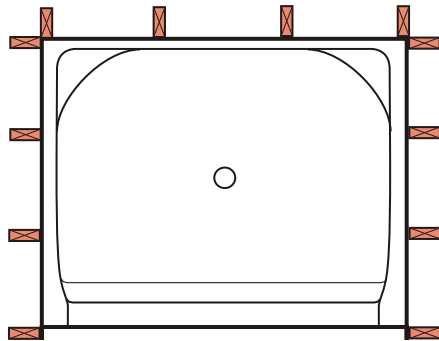

### CAUTION

**Dimensions may vary  $\pm 1/4$ " inch-  
check unit before installation.**

Some Florestone units are too large to pass through doorways. Make sure the unit is in the installation area before framing is completed

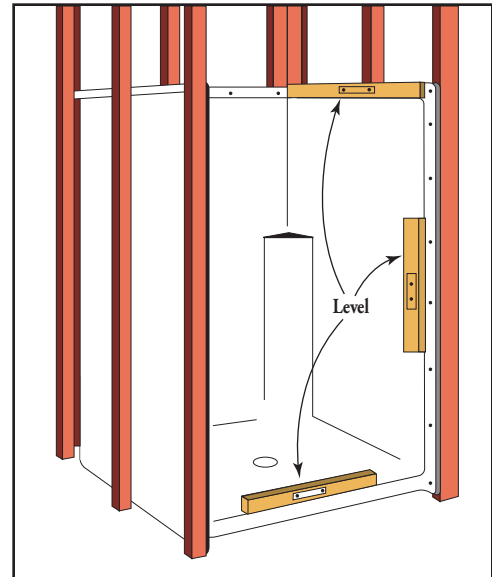

### SETTING SHOWER UNIT

Mortar or plaster base is recommended. Install unit into position with front threshold firmly on the floor. Level and plumb threshold (right to left), sidewalls (vertical) and front shoulder (front to back). Shim if necessary.

### SECURE UNIT

Fasten back and side wall flanges to studs with large headed #6 galvanized nails. Use #12 sheet metal screws for installation into steel studs.

### ROUGH PLUMBING

Rough plumbing must extend 1" above sub-floor or slab. Unit should be located to provide access through the walls to make connections. Lay out accurate location of valves and drill  $1/4$ " holes. From finished side of unit enlarge holes with a hole saw. For large openings use a saber saw. For fire rated walls, finished wall board must be in place before unit is installed.

### CAULK

Caulk all openings around valves and outlets with a silicone caulking.

### CLEANING

Clean up with liquid detergent and warm water.

### AVOID USING ABRASIVE CLEANERS



**FLORESTONE PRODUCTS CO., INC.**

2851 Falcon Drive • Madera, CA 93637

T. 559.661.4171 • T. 800.446.8827

F. 559.661.2070 • florestone.com