


Shower Wall System

3PC Shower Wall Kit - Modern Subway Tile

Model	A	B	C
363696-MS	96"	36"	36"
366296-MS	96"	36"	62"
346296-MS	96"	34"	62"
366296-MS	96"	36"	62"
426296-MS	96"	42"	62"
424296-MS	96"	42"	42"
345096-MS	96"	34"	50"
505096-MS	96"	50"	50"

SM = Modern Subway Tile Pattern

Wall Kits come with two side wall panels and one back wall panel. Corner moldings and soap dishes sold separately.

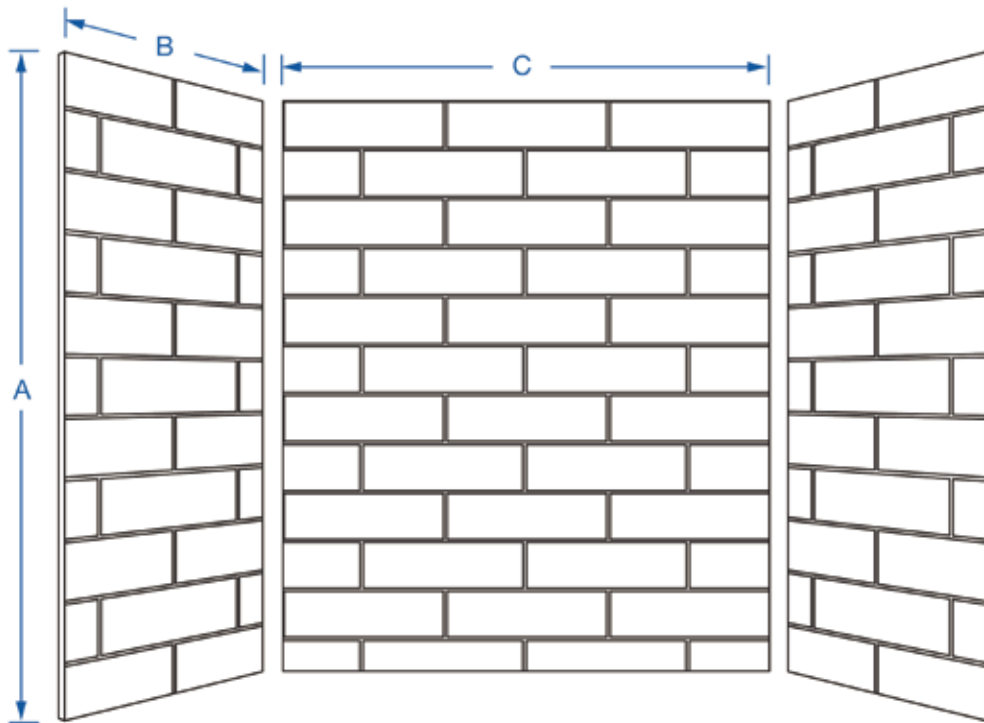

Product Information

The Florestone Wall kit is shipped in one carton containing two sides wall panels and one back wall panel. Unit to be manufactured of Florestone Solid Surface. Before beginning installation, check for damage. Report damage to your supplier. **DO NOT INSTALL A DAMAGED UNIT.**

IMPORTANT: Sealant must be applied to the seam where the walls meet the tub and where the Side Walls and Back Wall interlock to avoid water damage.

Do not use abrasive or acid based materials on wall surface.

(Not available in the N.CA & N.NV market.)